


GAZEBOS

ASSEMBLY INSTRUCTIONS

Remove all products from packaging

1

Place Gazebo frame in the centre of the desired area.
Remove cover.
Have 2 people stand on opposite sides, grasp two outer legs, lift off the ground and step backwards as it moves up and out.
Stop at arm's length.

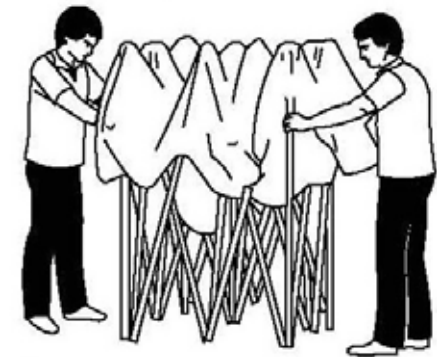

Aluminium Gazebo
TENT-XA

Available in 4 sizes: 2x2 | 3x3 | 3x4.5 | 3x6




Don't forget your walls, doors & windows.



2


Grasp the bottom of the diamond on opposite sides. Lift upwards and step back until Gazebo is fully opened.

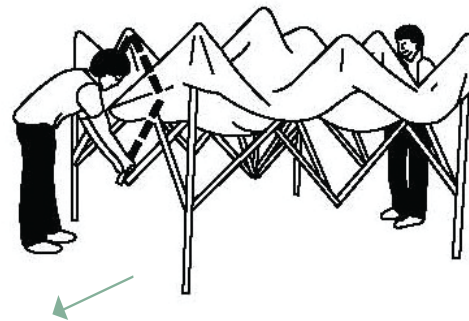

ASSEMBLY INSTRUCTIONS CONTINUED

3

Engage the auto slider button at each corner by pushing up with one hand, while holding down the top of the leg with the other hand. Snap button will engage. Repeat on all legs.

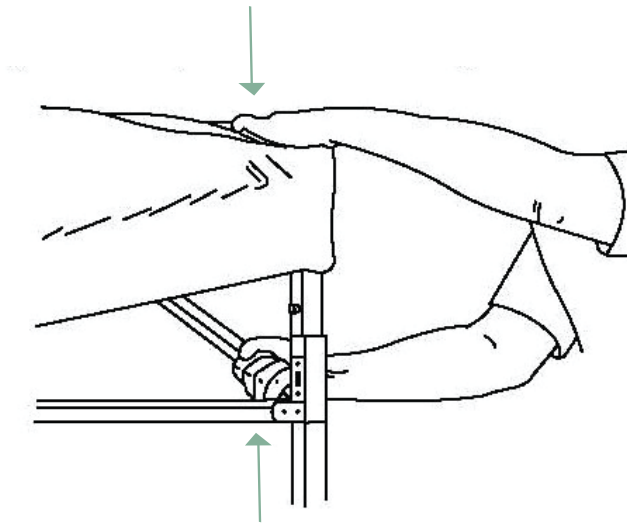

4

Lift two adjacent outer legs up and pull out the inner legs until the snap locks.

Repeat on all legs.

Raise or level the Gazebo using the adjustment holes on the bottom of each outer leg.



GAZEBO ACCESSORIES



Tent Pegs




7.5kg Weight

10.5L Water weights



LED Light Kit

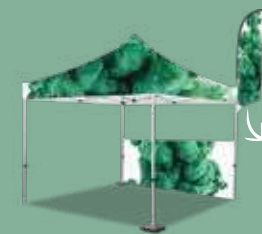

Flag Clamp



TAKING DOWN YOUR GAZEBO

1


Lift two outer legs slightly, and depress snap button. Lift the telescopic inner legs up into the outer legs. Repeat on the other side.



2

Release auto slider at each corner by pushing the snap button to release pressure. Repeat on all four corners.

RELEASE
SNAP-BUTTON

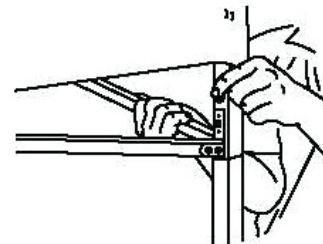

3

Grasp the top of the diamond on opposite sides, shake the Gazebo a little while stepping towards the other person until it's 3/4 closed. Then grasp the two outer legs, and push together fully. Place cover bag on.



RECOMMENDATIONS

- **Windy conditions:** Ensure you secure your Gazebo with weights and ground pegs.
- **Heavy wind:** Take down your Gazebo.
- **Rain:** Do not leave Gazebo unattended
- **Wet Fabric:** Let Gazebo dry before closing down.
- **Cleaning:** Use a mild detergent and water only.